

THROTTLE



Steel Rack

Yamaha FJR1300

GPT.06.498.20001

Instruction Rev: 00

Twisted Throttle LLC 570 Nooseneck Hill Rd Exeter, RI 02822

Phone 401,284,4200 Fax 401,223,6954 www.twistedthrottle.com

PLEASE READ BEFORE INSTALLING

TWISTED THROTTLE products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. TWISTED THROTTLE takes no responsibility for damages caused by improper installation.

Medium strength liquid thread-locker (i.e., "Locktite") should be used to secure all screws, bolts, and nuts.

All screws, bolts, and nuts should be checked after driving the first 30 miles (50 km) to ensure that all are tightened to the proper torque.

All screws, bolts, and nuts, including all replacement hardware provided by TWISTED THROTTLE should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:

ivl5	
M6,	6.5 ft-lbs (9 Nm)
M8	
M10	32 ft-lbs (43 Nm)
M12	55 ft-lbs (75 Nm)



Installation Instructions





Step One: Mount the center bracket to the rear mounting point on your top rack.








Step Two: Mount the Steel-Rack to the center bracket.



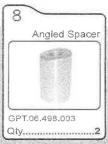



Step Three: Place the angled spacers under the front of the rack so the angled side is up and the high point is to the rear. Fasten all bolts to the recommended torque. If you are mounting a Coocase you will need to use the cap screws along with the other Coocase hardware to attach the Coocase plate to the Steel Rack.