
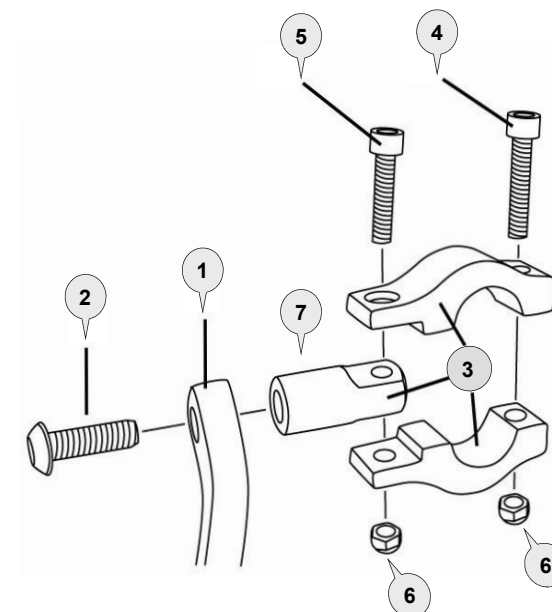


Barkbusters

www.barkbusters.net

VPS Alloy Handguard for Moto Guzzi 1200 Stelvio FITTING INSTRUCTIONS

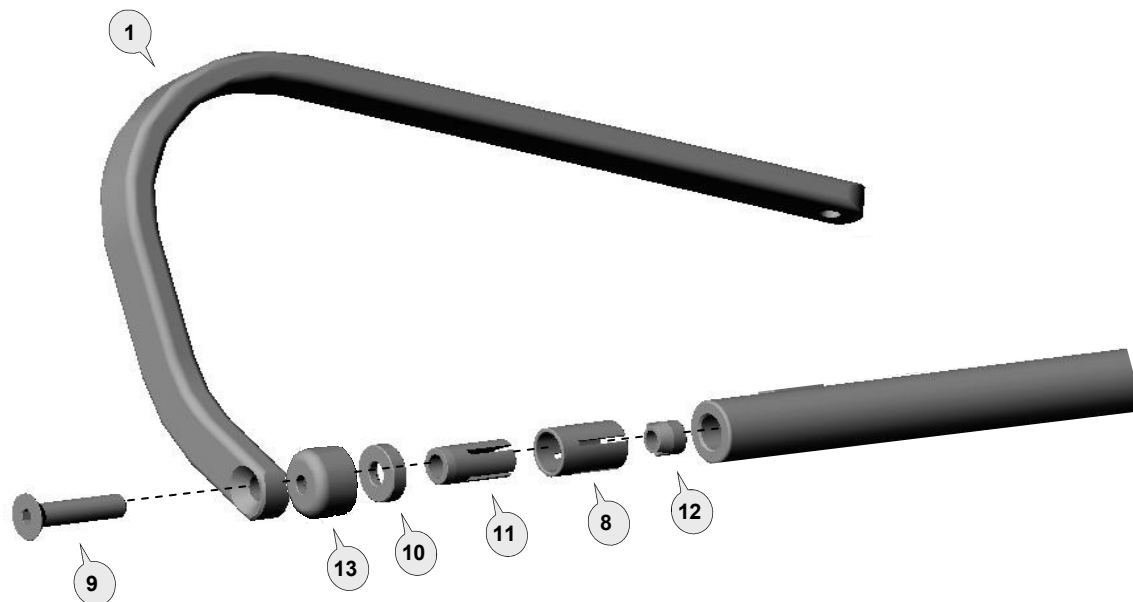

Important Fitting Procedure

Remove original handlebar end caps.

Assemble Barkbusters Handlebar End Mounting parts as per the above diagram.

Insert into handlebar end and tighten in preferred position with bolt (9).

Fit clamp to handlebar and connect to aluminium bar (1) with bolt (2).

ATTENTION: The clamp bolts must be tightened in the following order:

Tighten bolt (2) through the aluminium bar (1) to the swivel section (7) of the clamp assembly.








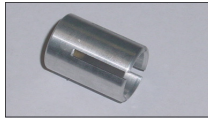





Tighten bolt (5) to solidly lock the swivel section (7) between the clamp saddles (3).

Tighten bolt (4) to secure the clamp assembly firmly to the handlebar.

Note: The clamp is designed to allow the nut on bolt (5) to pull into the recessed hole. This eliminates the need for a wrench after the bolt starts to tighten.

Follow same procedure for left and right sides.



1 Aluminium Bar  PN: BAR-VPS-F800GS Pcs. 2(L/R)	2 Button Head Bolt 25mm  PN: M8x25BHCSZP Pcs. 2	3 Clamp Saddle  PN: CS-STD Pcs. 4	4 Socket Head Bolt 30mm  PN: M6x30SHCSZP Pcs. 2	5 Socket Head Bolt 25mm  PN: M6x25SHCSZP Pcs. 2	6 Nylock Nut 6mm  PN: M6LN Pcs. 4	7 Straight Swivel  PN: CP1 Pcs. 2
8 Collet  PN: COLLET14-16 Pcs. 2	9 Flat Head Bolt 70mm  PN: M8x70FHCSZP Pcs. 2	10 Spacer 10mm  PN: BSSRT10 Pcs. 2	11 Expander  PN: BBE14A Pcs. 2	12 Nut  PN: Nut12 Pcs. 2	13 Bar End Weight  PN: BEW Pcs. 2	

ATTENTION: Rideworx recommends that this product be installed by a qualified motorcycle technician.

Important: All screws, bolts and nuts, including all replacement hardware provided by Rideworx, should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided the following torques may be used:

M6	10 Nm (7.4 lbf ft)
M8	23 Nm (17 lbf ft)

After the first 50km of riding check all screws, bolts and nuts are tightened to the correct torque. We recommend a medium strength liquid thread lock product on all fasteners.



Phone: +61 (0)2 4271 8244
 Email: info@barkbusters.net
 Web: www.barkbusters.net

WARNING: Check operation of all handlebar controls, specifically the throttle, front brake, kill switch and clutch to ensure they are operating correctly and are in accordance with the OEM specifications. Do not ride the motorcycle if any controls are not operating correctly or if rear view mirror vision is obscured. Check periodically that all bolts are tight.

Disclaimer:

Rideworx inspects all products prior to packaging and strives toward improving its products. Our guarantee is limited to the replacement of defective products. This limited guarantee is in lieu of all other guarantees or warranties implied or expressed. Buyer assumes all risk for any and all damage caused to him/herself, a third party and/or property by virtue of failure of this product. We make no warranty as to products distributed by Rideworx, expressed or implied from our suppliers or third party vendors. This includes, without limitation, any warranties or merchantability and fitness for a particular purpose. All products are offered and designed for use with standard machines. Rideworx makes no claims as to the products effectiveness on modified machines. Rideworx is the sole determiner of abuse, misuse, installation errors and modifications. We assume no liability for any errors in listings, specifications, part numbers, prices or model applications. We reserve the right to change specifications, product descriptions, product quality, pricing and application at any time without notice and without further obligation. These handguards are not designed to prevent injury in the event of an accident or crash. Ensure all controls are free of the handguards each time you ride. Failure to follow the instructions or heed this warning could lead to loss of control of your motorcycle and/or accident, injury or death. By installing and/or using a Rideworx product, you hereby accept and understand these stated terms and conditions and have followed all instructional steps.

Barkbusters