

Denali DM LED Driving Lights

TT-DM Instruction Rev: 00

PLEASE READ BEFORE INSTALLING

TWISTED THROTTLE products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. TWISTED THROTTLE takes no responsibility for damages caused by improper installation.

All screws, bolts, and nuts, including all replacement hardware provided by TWISTED THROTTLE should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:

M5.....	3.5 ft-lbs (5 Nm)
M6.....	7 ft-lbs (9.6 Nm)
M8.....	13 ft-lbs (18 Nm)

All screws, bolts, and nuts should be checked after driving the first 30 miles (50 km) to ensure that all are tightened to the proper torque.















Medium strength liquid thread-locker (i.e., "Loctite") should be used to secure all screws, bolts, and nuts.

Twisted Throttle LLC
570 Noose Neck Rd
Exeter, RI 02822

phone: 401.284.4200
fax: 401.223.6955
www.twistedthrottle.com

WARNING! – Only use the included wiring harness to wire Denali lights. Even though the plug may be similar to other wiring, Denali lights have unique circuitry that can easily be damaged by using wiring other than the included harness.


Kit Contents

1 DM LED light Pod  10° Optic Installed Qty.....2	2 Hinge Link  Qty.....2	3 Socket Head Screw  M3x12.....DIN 912 Qty.....4	4 25° Optic  Qty.....2
5 "U" Bracket Hinge  M8 through hole Qty.....2	6 Hex Head Screw  M6x20.....DIN 933 Qty.....2	7 Spur Washer (M6)  M6 Qty.....4	8 Lock Nut (M6)  M6.....DIN 985 Qty.....2
9 Hex Head Screw  M8x16.....DIN 933 Qty.....2	10 Lock Nut (M8)  M8.....DIN 985 Qty.....2	11 Interlink  Qty.....2	12 Single Intensity Wiring Harness  5 Amp Fuse Qty.....1
13 Posi-tap Connector  Qty.....1	14 Allen Key  2.5mm Qty.....1	15 Zip Tie  Black Qty.....4	16 Double Stick Mount  Qty.....1

Mounting Instructions

Mounting illustration is for assembly reference only. Actual components may vary from components illustrated.

DENALI
EXTREME LED LIGHTING BY TWISTED THROTTLE

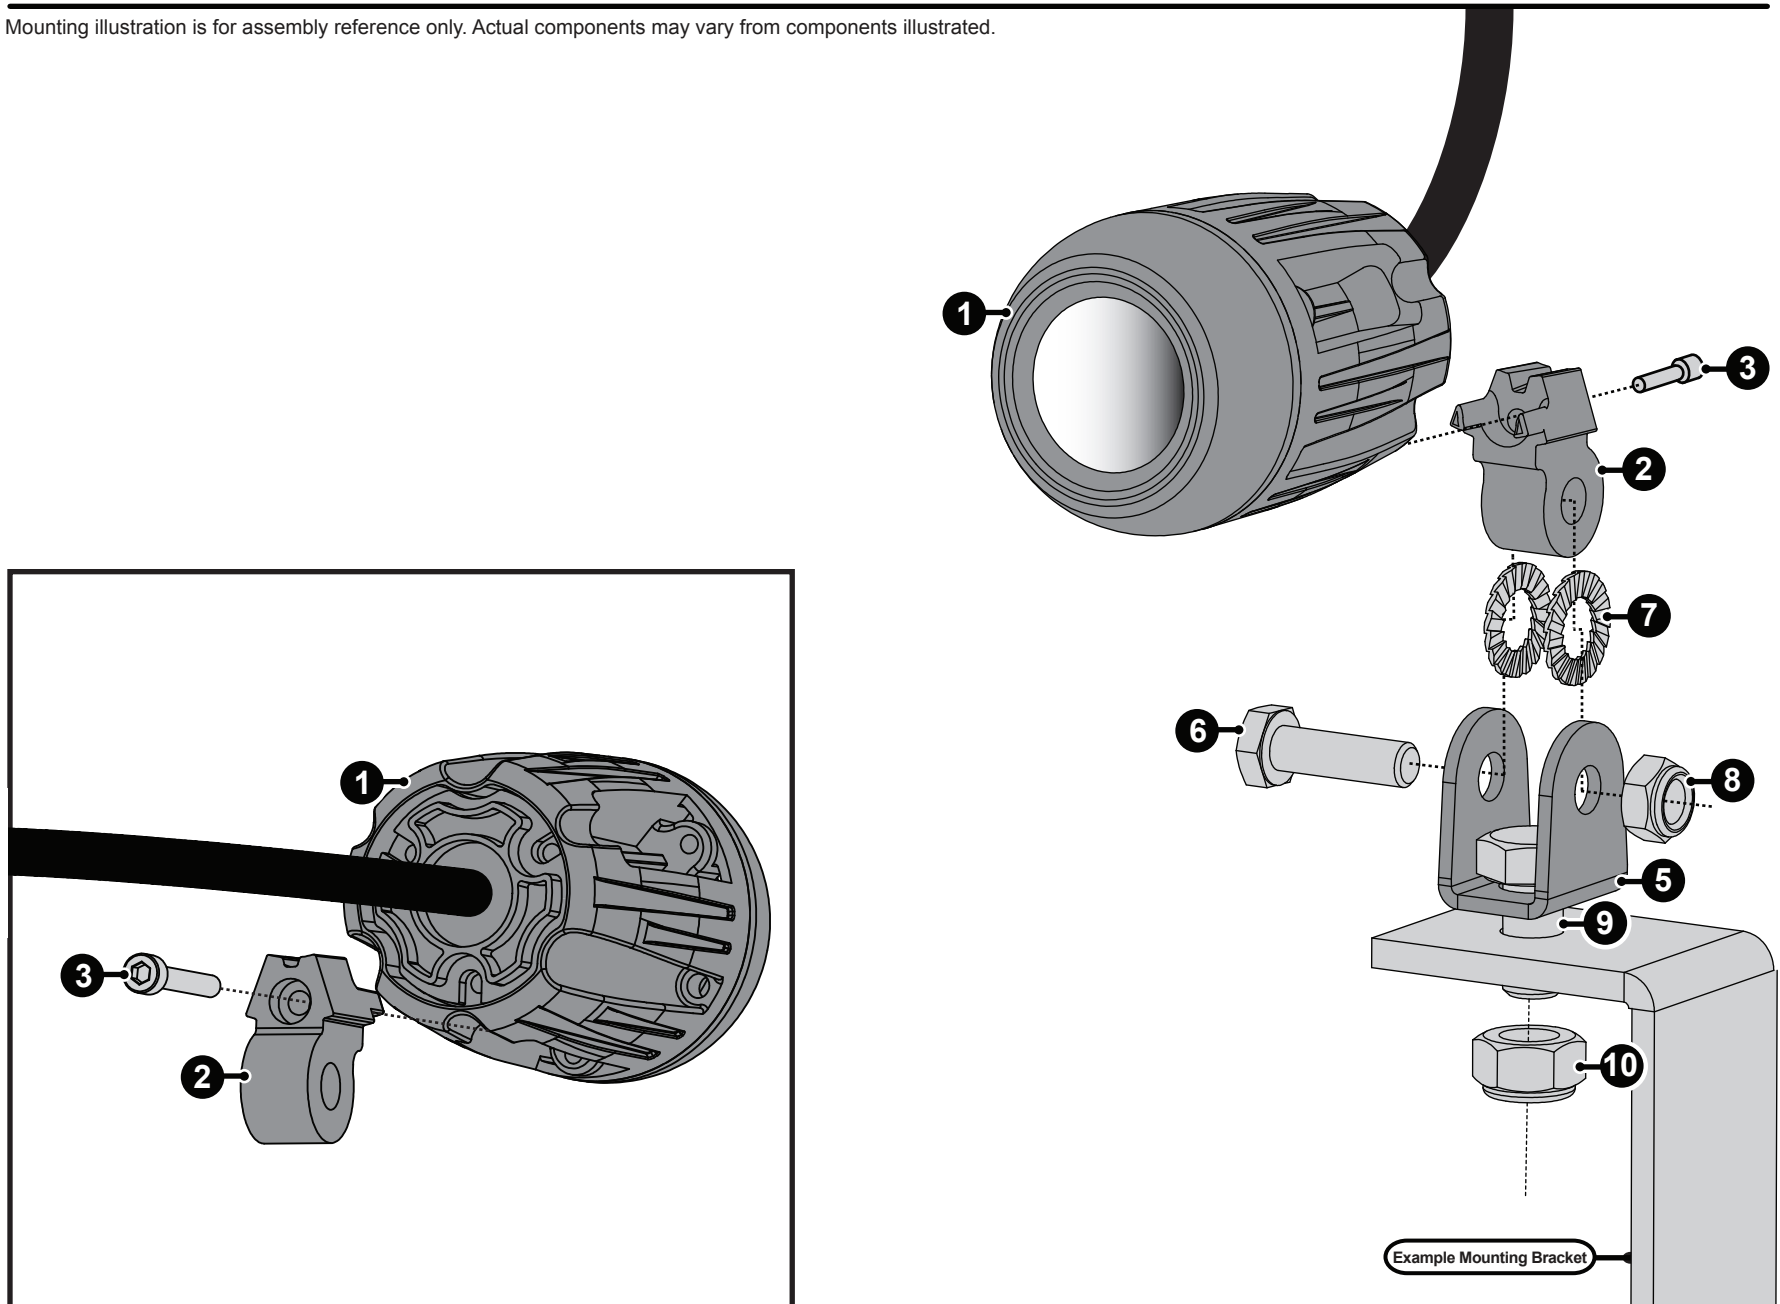

Wiring Instructions

Option 1 (Lights controlled by Denali on / off switch):

(1) Attach the positive and negative ring terminals to the battery.

(2) Identify the **white** wire (switched power) . Use one posi-tap connector to tap the white wire into any switched 12 volt power source. For example, your motorcycles running light wire or dash light wire are a switched 12 volt power source.

(3) Connect the DM Lights and mount the switch. Check to make sure they are functioning properly. Make sure all wires and switch are properly routed from the battery to the lights avoiding hot surfaces, sharp objects, and moving parts.

Option 2 (Lights controlled by your motorcycles high beam switch):

(1) Attach the positive and negative ring terminals to the battery.


(2) Identify the **white** wire (switched power) . Use one posi-tap connector to tap the white wire into the motorcycles high beam headlight wire. In this wiring configuration, your Denali lights will be operated through your bikes high beam switch. To turn the lights off entirely simply toggle the switch included with the Denali lights.

(3) Connect the DM Lights and mount the switch. Check to make sure they are functioning properly. Make sure all wires and switch are properly routed from the battery to the lights avoiding hot surfaces, sharp objects, and moving parts.

Note: Universal and bike specific mounting kits are available at twistedthrottle.com. Additional wiring options are possible. Visit twistedthrottle.com/denali2 to view an installation tutorial.

Wiring Diagram

Note: This drawing is not to scale and is intended for illustrative purposes only.

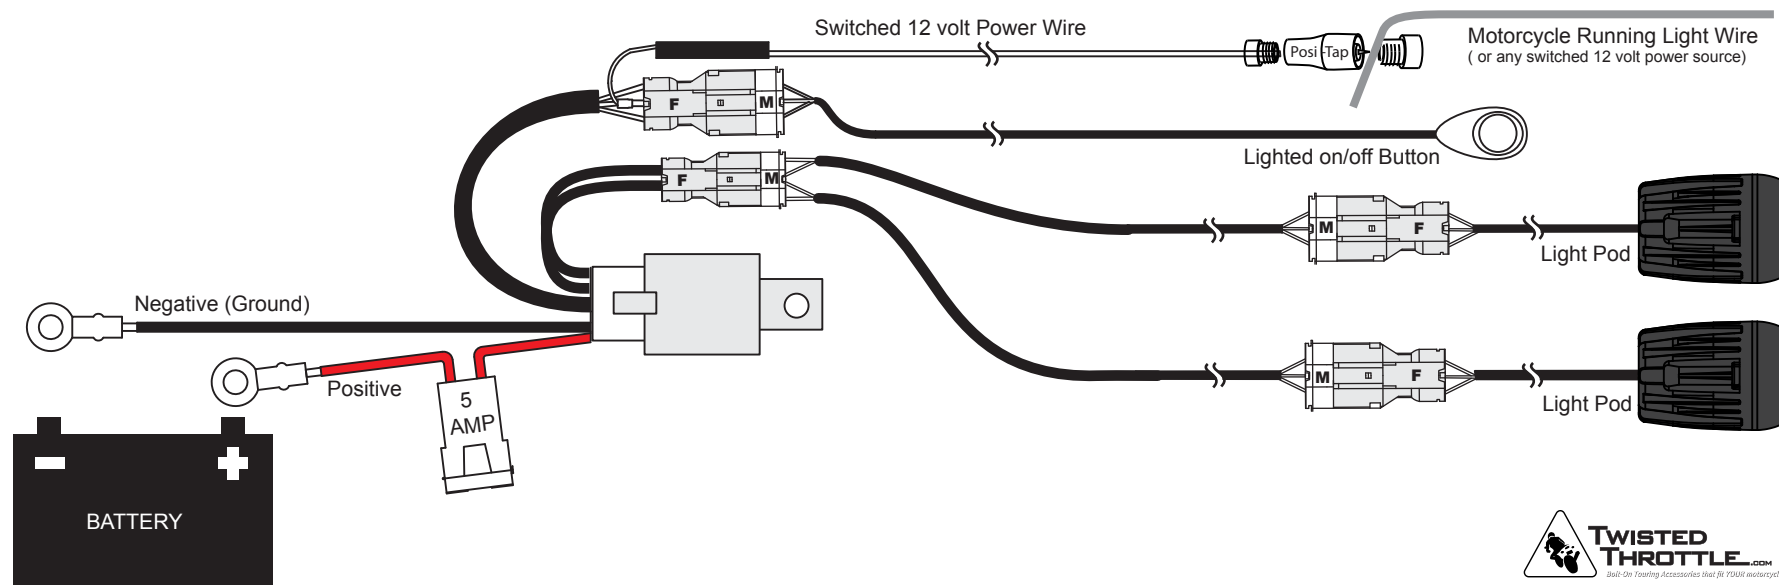

DENALI // DM1 LED Driving Lights // TT-DM1

WARNING! – If mounting the lights to the front fender, forks, or fairing, turn the handlebars fully left and right and fully compress & uncompress the suspension to ensure the wires will not bind and have enough slack for your motorcycle to operate properly.