



**TWISTED  
THROTTLE**.COM

*Bolt-On Touring Accessories that fit YOUR motorcycle!*

## Universal Case Bolt-on Kit For SW-Motech & Givi Sidecarriers

Fits Top Loader cases larger than:  
13" wide by 9" tall

**PEL.00.1440**



### PLEASE READ BEFORE INSTALLING

TWISTED THROTTLE products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. TWISTED THROTTLE takes no responsibility for damages caused by improper installation.

Medium strength liquid thread-locker (i.e., "Locktite") should be used to secure all screws, bolts, and nuts.

All screws, bolts, and nuts should be checked after driving the first 30 miles (50 km) to ensure that all are tightened to the proper torque.

All screws, bolts, and nuts, including all replacement hardware provided by TWISTED THROTTLE should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:

|          |                   |
|----------|-------------------|
| M5.....  | 3.5 ft-lbs (5 Nm) |
| M6.....  | 6.5 ft-lbs (9 Nm) |
| M8.....  | 16 ft-lbs (22 Nm) |
| M10..... | 32 ft-lbs (43 Nm) |
| M12..... | 55 ft-lbs (75 Nm) |



Instruction Rev: 00

Twisted Throttle LLC  
570 Nooseneck Hill Rd  
Exeter, RI 02822

Phone: 401.284.4200  
Fax: 401.223.6954  
[www.twistedthrottle.com](http://www.twistedthrottle.com)

# Installation Instructions



1

Lens Head Screw



M6x55.....ISO 7380  
Qty.....4

2

Sealing Washer



M6  
Qty.....8

3

Spacer



OD: 12.7 ID: 6.5 L: 25.4  
Qty.....4

4

Nyloc Nut



M6.....DIN 985  
Qty.....8

5

Lens Head Screw




M6x60.....ISO 7380  
Qty.....4

6

Spacer



OD: 12.7 ID: 6.5 L: 28.5  
Qty.....4

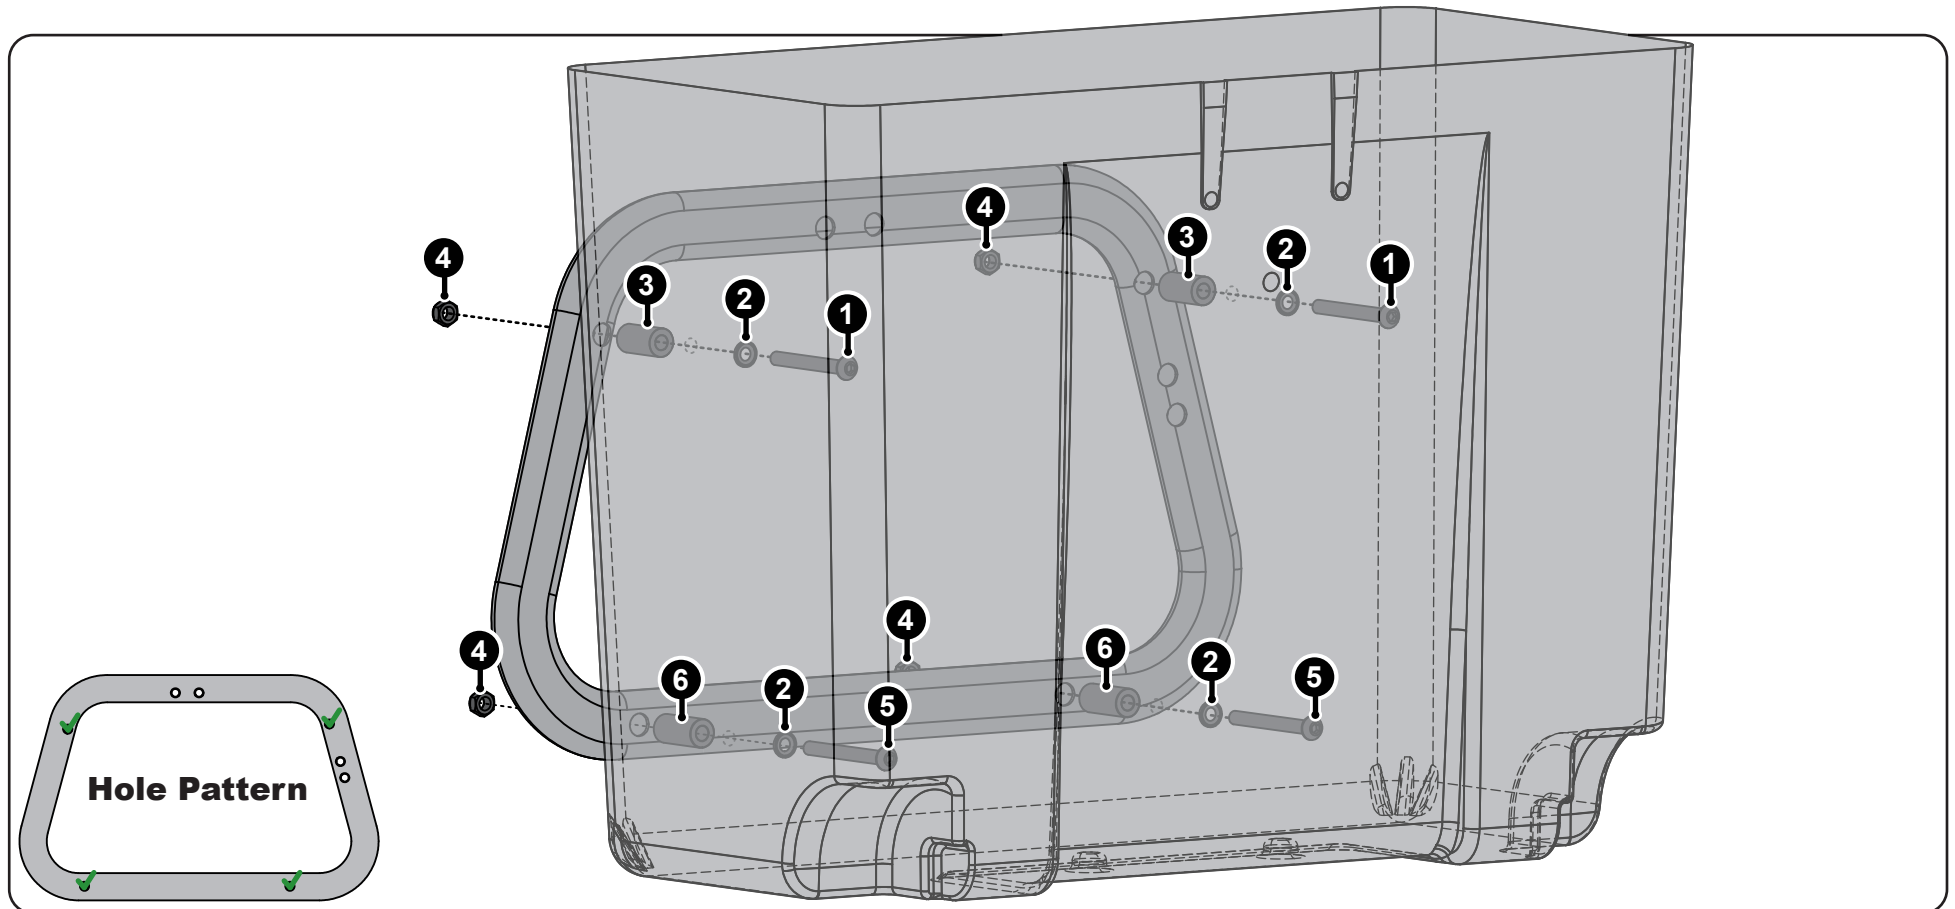

**Step One:** Place the side carrier on the back of the luggage case and mark the hole pattern on the case. Using a 6mm drill bit, drill all four holes through the back side of the case.

**Step Two:** Bolt the luggage case to the side carrier using the supplied hardware.