




**TWISTED
THROTTLE**.com

Bolt-On Touring Accessories that fit YOUR motorcycle!

Stebel Horn Mount

'12- Triumph Tiger Explorer 1200

SKU: HMT.11.10200

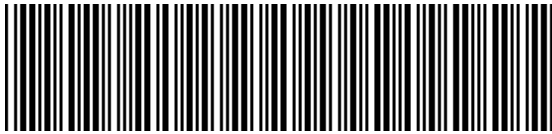

PLEASE READ BEFORE INSTALLING

TWISTED THROTTLE products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. TWISTED THROTTLE takes no responsibility for damages caused by improper installation.

Medium strength liquid thread-locker (i.e., "Locktite") should be used to secure all screws, bolts, and nuts.

All screws, bolts, and nuts should be checked after driving the first 30 miles (50 km) to ensure that all are tightened to the proper torque.

All screws, bolts, and nuts, including all replacement hardware provided by TWISTED THROTTLE should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:

M5.....	3.5 ft-lbs (5 Nm)
M6.....	6.5 ft-lbs (9 Nm)
M8.....	16 ft-lbs (22 Nm)
M10.....	32 ft-lbs (43 Nm)
M12.....	55 ft-lbs (75 Nm)

1

Hex Head Screw



M8x25.....DIN 933

Qty.....1

2

Spacer



OD: 19.05 mm ID: 8 mm L: 6 mm

Qty.....1

3


Nyloc Nut



M8.....DIN 985

Qty.....1

Step One: Locate your lower, right hand side radiator bracket. Using the included hardware and spacer, hang the horn from the middle slot of the bracket. Be sure the horn does not touch the engine before fully tightening.

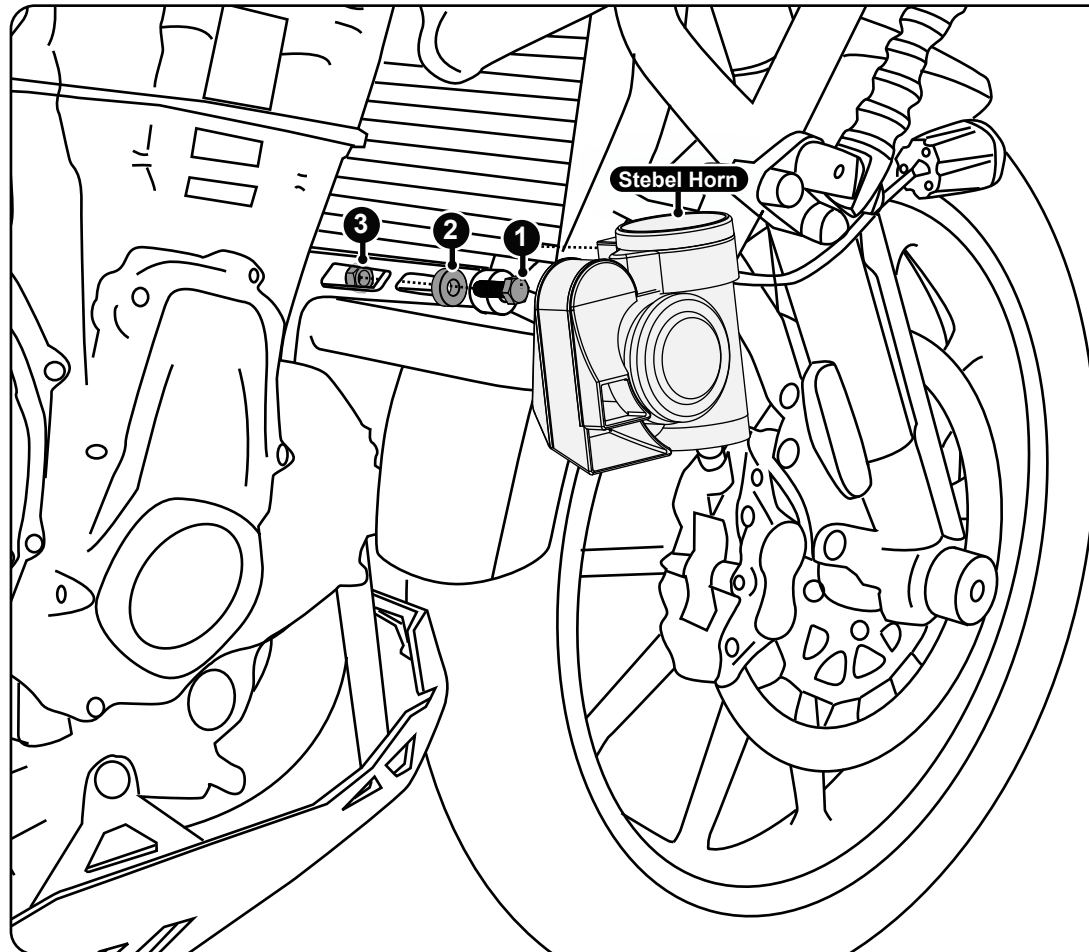

Instruction Rev: 00

Twisted Throttle LLC
570 Nooseneck Hill Rd
Exeter, RI 02822

Phone: 401.284.4200
Fax: 401.223.6954
www.twistedthrottle.com